

S.01-B

**SET-UP INSTRUCTION SHOP SYSTEM / HIGH WALL UNITS CODE 1001 OR 1001/201
+ GLASS UNIT CODE 1124/133 AND BASE UNIT CODE 1124B/65 OR 1124BD/65**


PRÆSTEGAARD

shop
system dk




Præstegaard Tegnøstue Aps Værkstedsgården 14-15 DK-2620 Albertslund Denmark
T +45 43 66 03 90 F +45 43 66 03 95 admin@praestegaardsystem.com www.praestegaardsystem.com

1 POSITION OF BASIC FITTING CODE 1000 AND SECTIONAL FITTING 1000/A TO CONSTRUCTION WALL

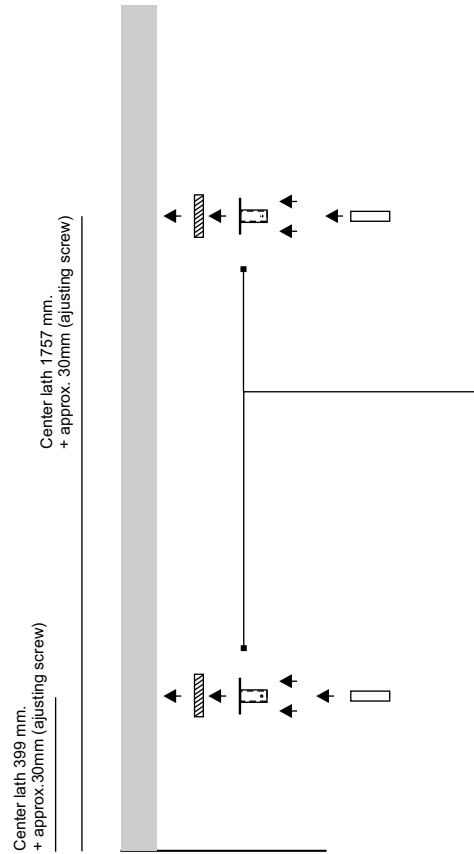


- Levelling or measuring by levelling-string for horizontal position.
- Position directly at construction wall (brick or concrete) use plugs and screws for brick / concrete
Position directly at gypsum fibre board etc. use expansion roset/plugs and screws for porous wall.
Position at porous wall fixing of laths is recommended.
Dimension of plugs and screws are depending of the nature of wall and for heavy objects.


2 FIXING OF SECTIONAL FITTING CODE 1000/A TO BASIC FITTING CODE 1000

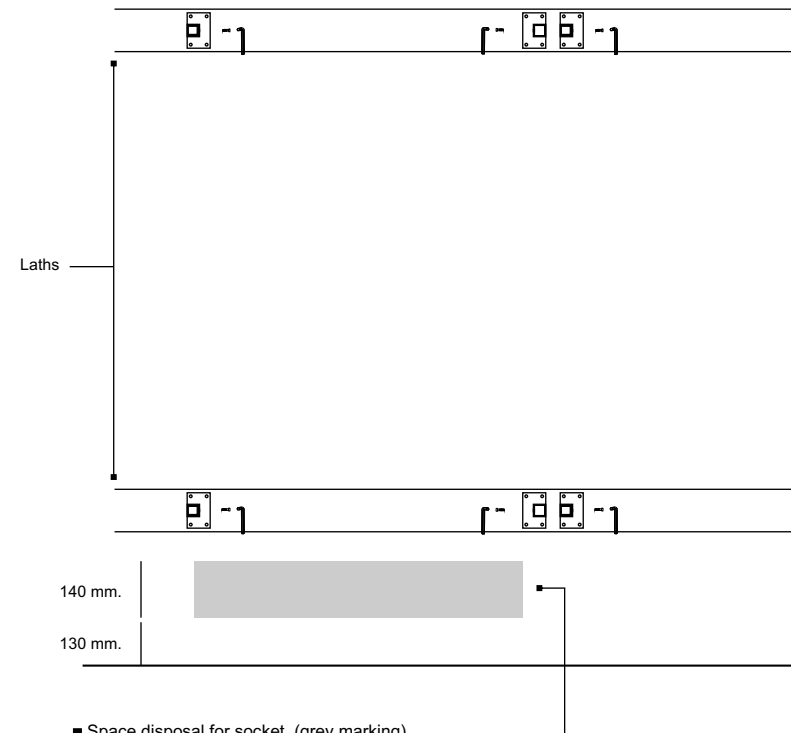

- Space disposal for socket. (grey marking)
- When fixing wall-unit use 4 set of basic/sectional fittings position per each 1040mm.


1 x 4 x 

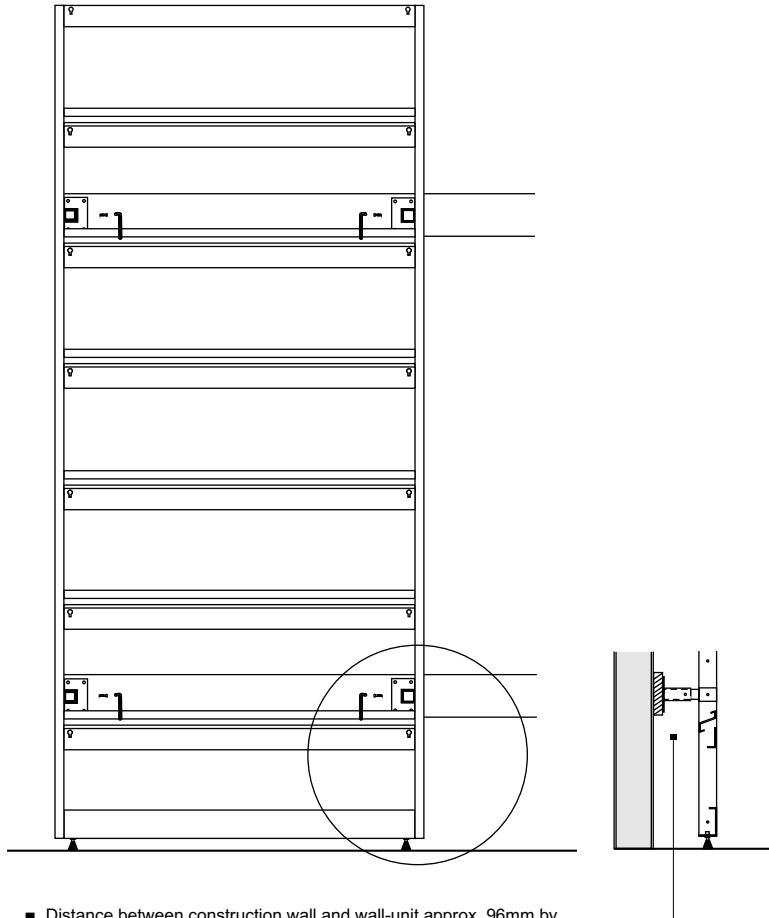


3 FIXING OF SECTIONAL FITTING CODE 1000/A TO WALL-UNIT




1 x  4 x 

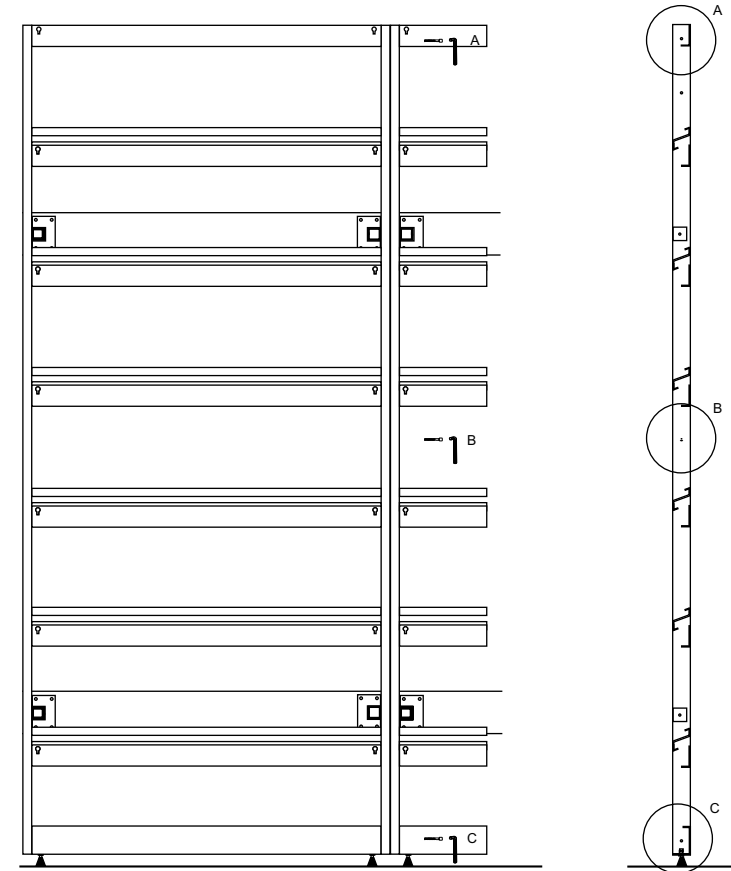4 FIXING OF WALL-UNIT TO WALL-UNIT




1 x  3 x  3 x 

5 ADJUSTMENT OF WALL-UNIT

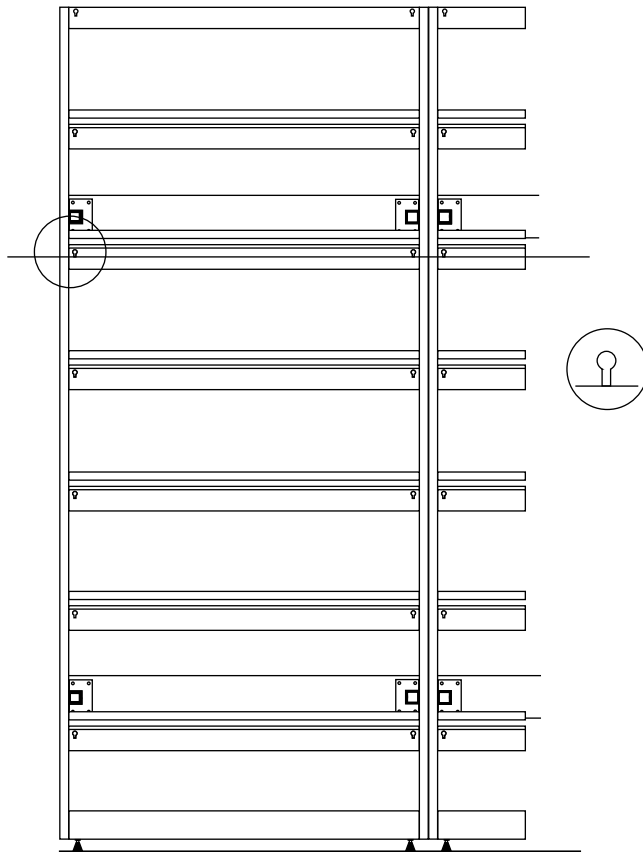

- Use key-holes for levelling points (figur 1).
Use adjustment-screws and tighten of CH bolts between wall-units for finally adjustment.

6 FIXING OF PLATE

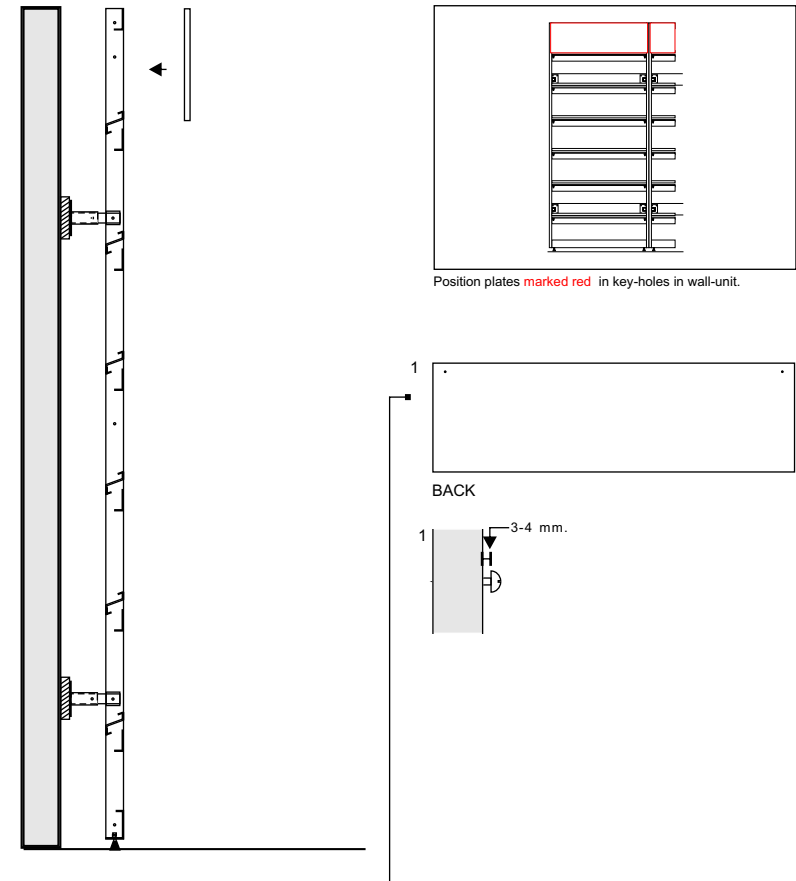


- Place woodscrews in 2 pre-bored holes in plate.
- Fixing of plates by woodscrews in key-holes in wall-unit.

2 x


7

FIXING OF BASE-UNIT CODE 1124/133

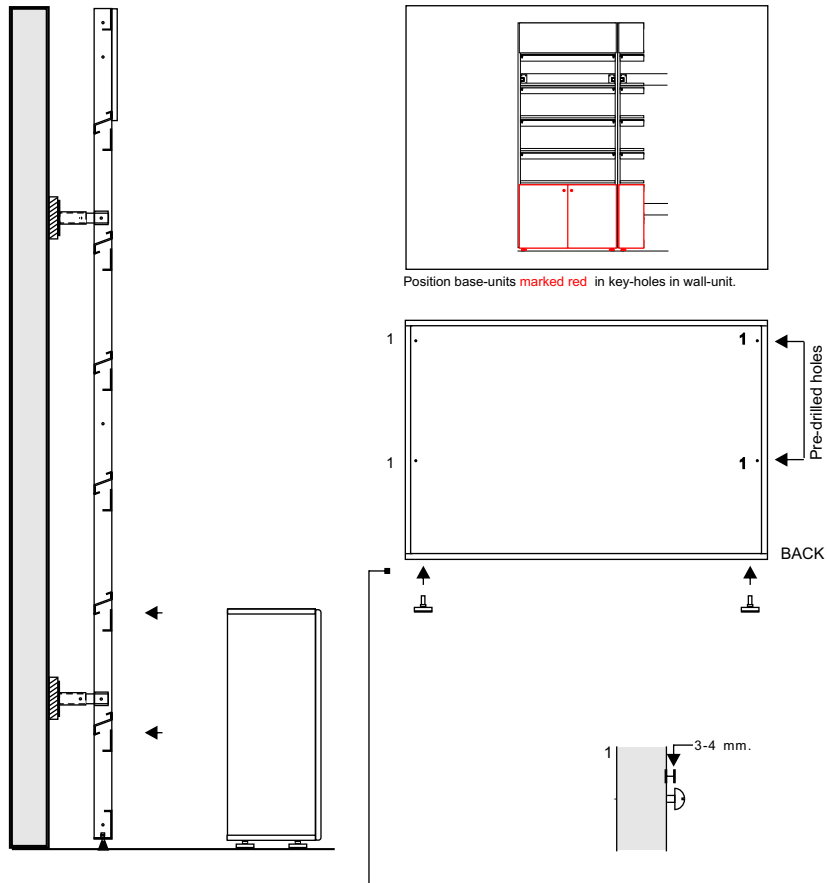

- Place 4 woodscrews in pre-drilled holes and 4 adjustment-screws per base-unit.
- Fixing of base-unit by woodscrews in key-holes in wall-unit and make finally adjustment. Make sure that the base-unit is in level.

4 x

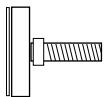


4 x



8

FIXING OF GLASS-UNIT CODE 1124/133

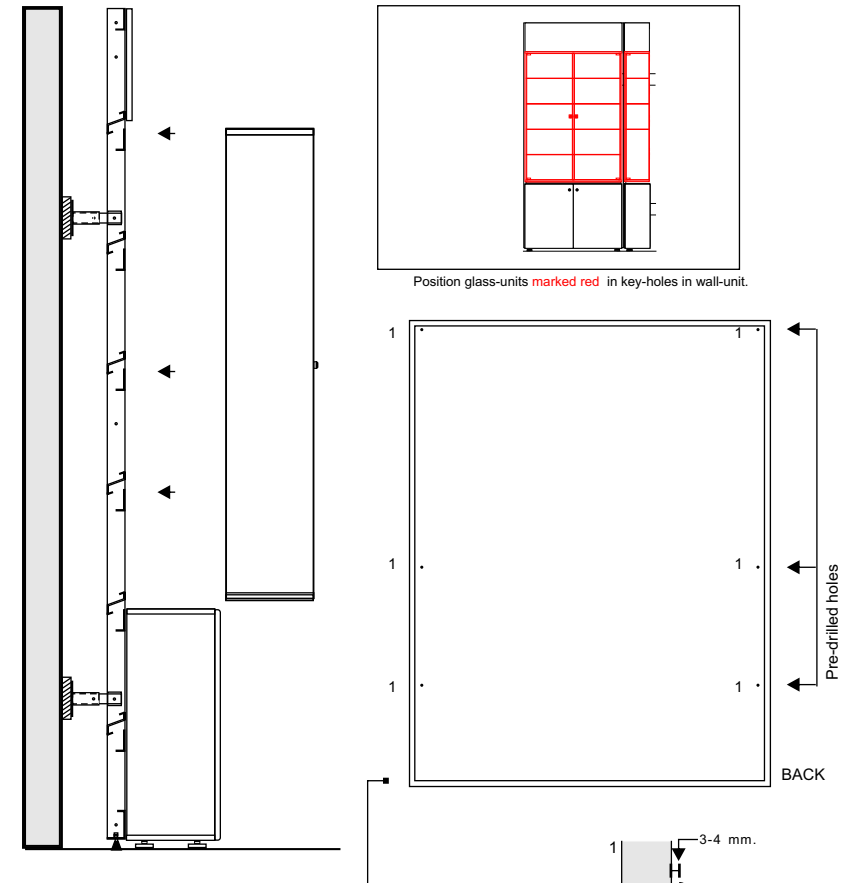


- Place 6 woodscrews per glass-unit in pre-drilled holes in glass-unit.
- Fixing of glass-unit by woodscrews in key-holes in wall-unit. Make sure that the 6 screws is fasten tight.

6 x




9 FIXING LIGHT INTO GLASS-UNIT

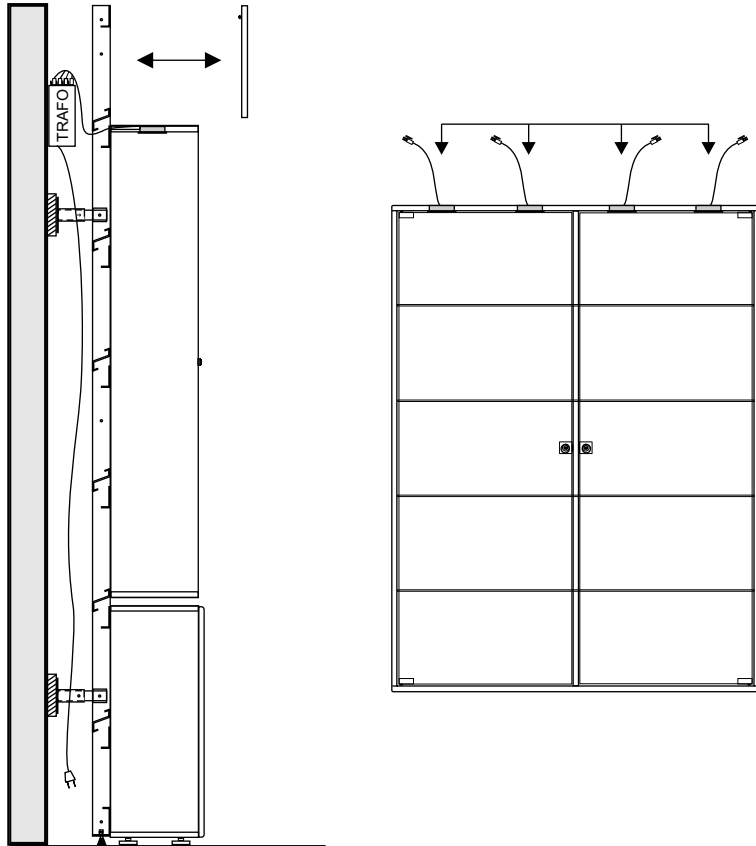




- Place transformer and connect to socket.
- Position 4 x built-in lamps into holes and connect with transformer.

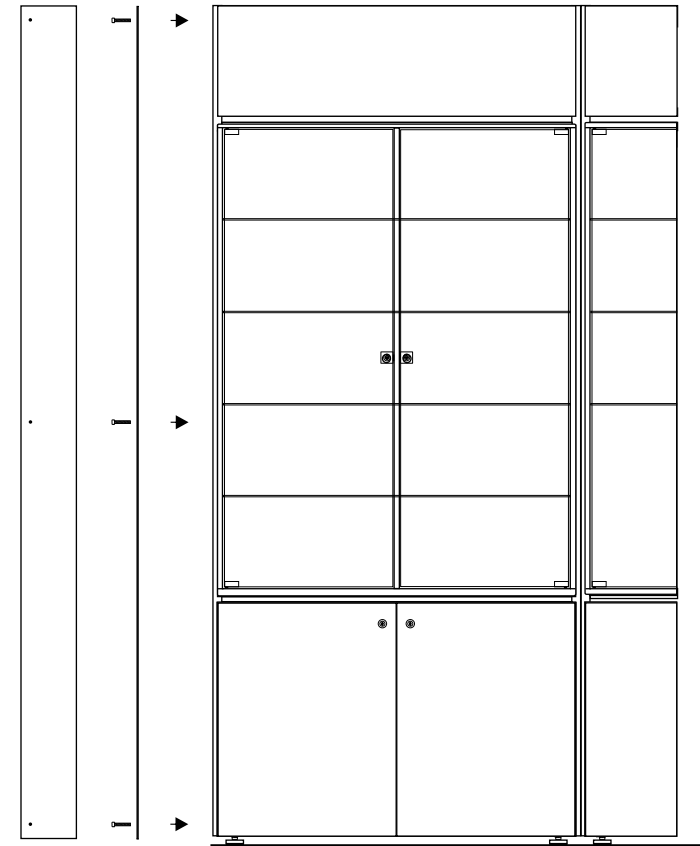10 FIXING OF END-PLATE TYPE 1022/235 or 1022/201



- End-plates code 1022/235 or 1022/201 fixed to wall-unit with 3 bolts incl. nuts per end-plate.

1 x  3 x  3 x 

S.01-B

PRÆSTEGAARD

shop
system dk

